

# Troubleshooting Possible Display Issue on New or Recently Moved VT-34 TS Wine Coolers

In rare instances, your wine cooler's display wiring may come loose during transit. This may cause your unit to flash EH on the display while the unit beeps (approximately ten times per minute).

## To resolve, follow these steps:


1. Gently pry off the top hinge cover. (You may wish to use a flat tool, such as a flathead-screwdriver. Do not use a sharp tool, such as a knife; you must take care not to accidentally cut wiring under cover.)



2. Check to see if wiring has come disconnected.



3. Reconnect the two white plastic connectors

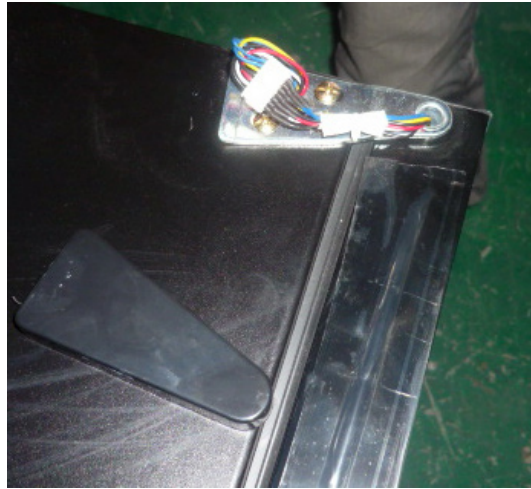

4. Gently tap hinge cover back into place.



Please note: If your display is malfunctioning but you've found the wiring to be connected correctly on your wine cooler, please contact Vinotemp ([info@vinotemp.com](mailto:info@vinotemp.com)) for service assistance.