

VT32 PARTS LIST

序号	名称	NAME	序号	名称	NAME
1	减震垫圈	Gasket	26	控制罩	Temperature display board cover
2	风机支撑架	Supporter of fan motor	27	PVC 条	PVC sticker
3	压缩机	Compressor	28	搁架	Rack
4	风机	Fan motor	29	门封条	Door gasket
5	积水盘	Drip pan	30	塑料门框	Plastic door frame
6	后网栅	Back retiary cover	31	门轴孔盖	Door hinge cover
7	出水管	Pipe of seeper	32	门玻璃	Glass
8	密封圈	Seal gasket	33	上门轴套	Up door hinge jacket
9	右侧板	Right side panel	34	闷头	Door Stopple
10	积水槽	Drip tray	35	铝合金门框	Aluminum door frame
11	预埋盒	Junction box	36	门把手	Door handle
12	主控板	Main control board	37	下底板	Motherboard
13	电线盒	Back cover box	38	风叶	Blade
14	蒸发板	Evaporator	39	过滤器	Filter
15	后封板	Back panel	40	挡块 1	Block1
16	顶盖板	Top panel	41	下门轴套	Down door jacket
17	左侧板	Left side board	42	通风栅	Grill
18	内胆	Inner liner	43	底脚	Feet
19	灯泡	Lamp	44	下门铰链	Down door hinge
20	灯座	Lamp holder	45	风道搁板	Separater
21	灯盒	Lamp box	46	冷凝器	Condenser
22	灯盖板	Lamp cover board	47	线夹	Wire clip
23	搁架挡块	Rack blocker	48	挡块 2	Block2
24	上门铰链	Up door hinge	49	电源线	Power Cord
25	数显板	Temperature display board			

VT32 Explode Drawing

