

## Replace the lock of the VT58

1. 拧下锁塑料档块固定螺丝

Screw out the plastic cover of the lock.



2. 取下档块

Take out the cover.



3. 用钳子松开锁固定卡簧

Let the fixer loose with the plier.



4. 将锁取出  
Pull out the lock.



5. 更换一具新锁  
Replace with a new lock.




6. 将锁装入门框中

Install the lock into the door frame.



7. 更换一根新的卡簧并且将锁固定

Replace a new fixer and fasten the lock.

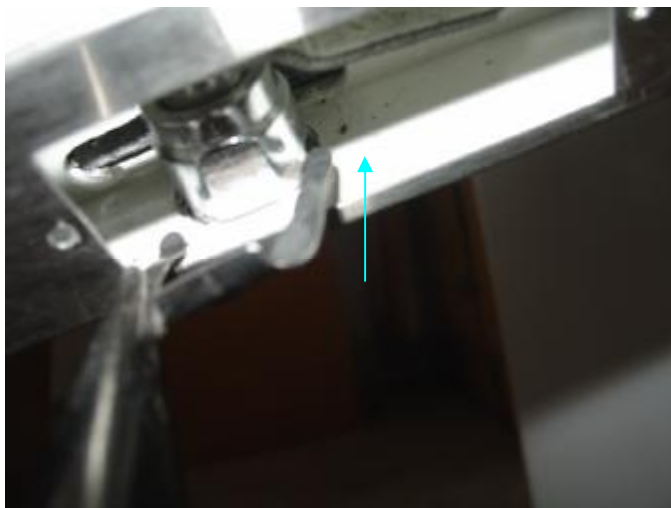



8. 将塑料档块装好  
Assemble the plastic cover.

