

# WM-125C

Wine Cellar Warning Caller



Quick Start Guide

## 1. PROGRAMMING REGULAR PHONE NUMBERS

The caller can call up to 4 regular phone numbers per zone. To program the numbers to be called when zone 1 (Z1) is in alarm:

- Press **PROG** **1** **#** - this selects location 1.
- After the dial LED flashes twice, enter phone number to dial.
- Finish by pressing **#**.

### Example:

**PROG** **1** **#** **5** **5** **5** **1** **2** **1** **2** **#** - this would dial phone number 555-1212 and deliver the message programmed for zone 1.

Program the remaining phone numbers (2, 3 and 4) as above. For example:

- Press **PROG** **2** **#** - this selects location 2.
- After the dial LED flashes twice, enter phone number to dial.
- Finish by pressing **#**.

Program numbers for **zone 2 (Z2)** in the same manner, except that the location numbers will be 5, 6, 7, & 8. Start with pressing **PROG** **5** **#** - this selects location 5.

## 2. PROGRAMMING NUMERIC PAGERS

Pagers require two phone number locations. Therefore, each WM-125C zone can call a maximum of two pagers. Proceed as follows to program pagers into zone 1:

- Press **PROG** **1** **#** - this selects location 1.
- After the dial LED flashes twice, enter the phone number of the numeric pager.
- Press **★** **4** - this links the current location with the next for pager function.
- Press **#**.
- Press **PROG** **2** **#** - this selects location 2.
- After the dial led flashes twice, press **★** **4** - this links this location to the previous location for pager function.

- Press **1** **0** to provide a 10-second delay allowing the paging company to pick up (you can enter any two digit value, but 10 seconds works in most cases).
- Enter the number you wish to appear on the pager's display and finish by pressing **#**.

### Example:

**PROG** **1** **#** **5** **5** **5** **2** **5** **2** **5** **★** **4** **#** and then:  
**PROG** **2** **#** **★** **4** **1** **0** **9** **9** **9** **9** **#** - this would deliver the message "9999" to a pager at phone No. 555-2525.

If you wish to program another pager in zone 1, follow these same steps, but use locations 3 and 4. To program pagers into zone 2, use locations 5 & 6 and/or locations 7 & 8.

## 3. RECORDING VOICE MESSAGES

The WM-125C contains three locations for voice messages. The total recording time can not exceed 20 seconds, or 15 seconds for one message.

**Message AL-1** is the alarm type message for zone 1 (burglar alarm activation, for example).

**Message AL-2** is the alarm type message for zone 2 (low temperature detection, for example).

**Message AL-1 & AL-2** is the location message (name and address - common to AL-1 and AL-2).

### To record AL-1 message:

- Press **#**
- Press and hold **AL-1** while reading the message aloud - red LED will be on.

- Release **AL-1** and press **#** - red LED will turn off.

### To record AL-2 message:

- Press **#**
- Press and hold **AL-2** while reading the message aloud - red LED will be on.
- Release **AL-2** and press **#** - red LED will turn off.

### To record AL-1 & AL-2 (location message):

- Press **#**
- Press and hold both **AL-1** and **AL-2** buttons at the same time while reading the message aloud - red LED will be on.
- Release **AL-1** and **AL-2** and press **#** - red LED will turn off.

For more advanced applications, refer to the WM-125C installation instructions, or contact the Vinotemp.

Vinotemp International

17631 S Susana Rd., Rancho Dominguez, CA 90221

Tel: (310) 886-3332 Fax: (310) 886-3310 Email: info@vinotemp.com